

# Uputstvo za podešavanje Planet ADE-4400A ruter



## Sadržaj Vašeg pakovanja

- Jedan Planet ADE-4400A ruter
- Jedan DC strujni adapter
- Jedan mrežni kabl
- Jedan telefonski kabl
- Jedan ADSL spliter


## Napomena:

Molimo Vas proverite da li Vaše pakovanje sadrži sve gore navedene stavke.

## KORAK 1: FIZIČKO POVEZIVANJE ADSL RUTERA


ADSL spliter povežite **direktno** na telefonsku liniju kablom koji ide u port "Line" na spliteru. Iz porta "Phone" izvedite telefonski kabl na koji ćete povezati Vaš telefonski aparat. Iz porta "ADSL" ("Modem") izvedite telefonski kabl koji ćete povezati sa Vašim ADSL uređajem. Ethernet (mrežni) kabl povezati iz "Ethernet" porta u ADSL uređaju u "Ethernet" port na vašem računaru. Svi telefonski aparati moraju da budu povezani preko splitera. Ukoliko nisu povezani preko splitera, svaki telefonski aparat mora imati postavljen mikrofilter.

**ADSL ruter se priključuje na telefonsku liniju na način prikazan na slici:**

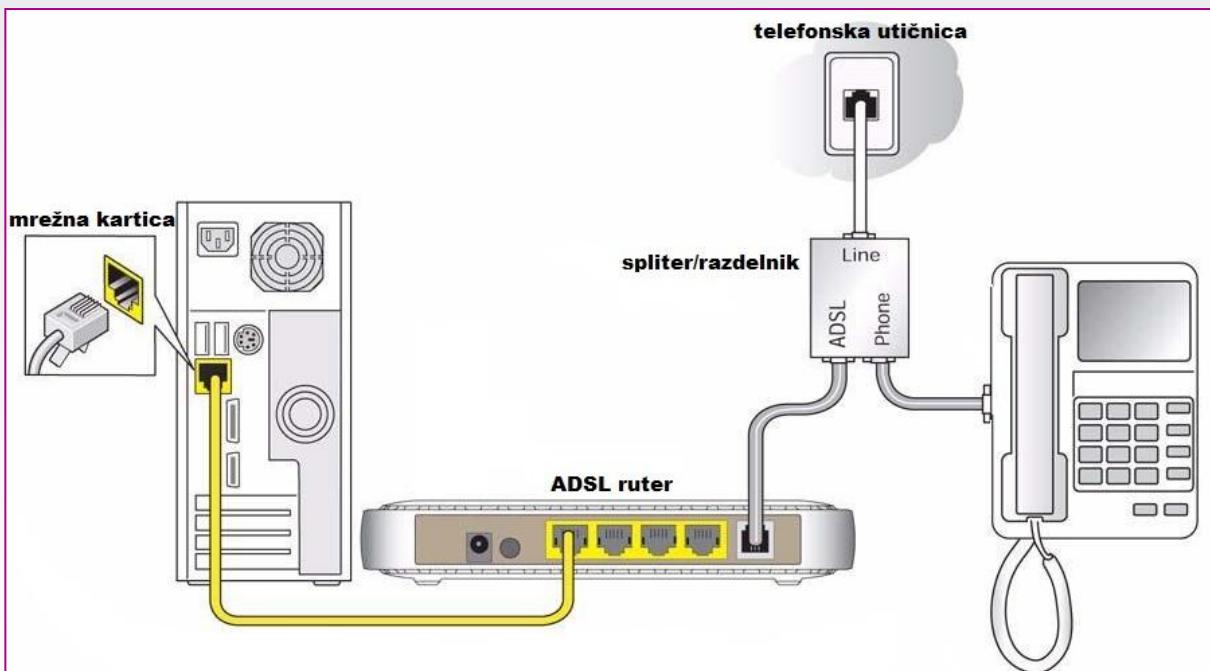

# Uputstvo za podešavanje Planet ADE-4400A rutera

## KORAK 2: KONFIGURISANJE RUTERA

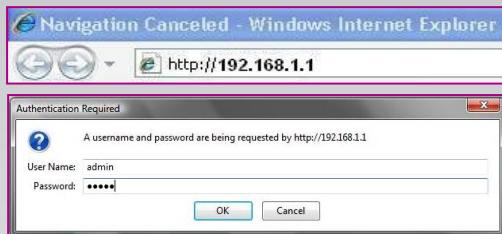

Pokrenite internet pretraživač (Internet Explorer, Mozilla, Opera, Safari...), zatim u polju za unos adrese unesite : **192.168.1.1**

Nakon ovog postupka, pojaviće vam se prozor u koji ćete upisati korisničko ime i lozinku, kao što je navedeno:

User Name: **admin**  
Password: **admin**

Zatim se otvara sledeća stranica u kojoj pokrećete Wizard za konfigurisanje rutera. U ponuđena polja upišite sledeće vrednosti: **VPI: 8 , VCI: 35** ; Zatim kliknite na dugme **Next**.

This Wizard will guide you through the steps necessary to configure your DSL Router.  
Note: This PVC will instead of the first original PVC.

ATM PVC Configuration

The Virtual Path Identifier (VPI) and Virtual Channel Identifier (VCI) are needed for setting up the ATM PVC.  
Do not change VPI and VCI numbers unless your ISP instructs you otherwise.

VPI: 8 (0-255)  
VCI: 35 (32-65535)

Next>

WAN Connection Type:  PPP over ATM(PPPoA)  
 PPP over Ethernet(PPPoE)  
 1483 MER  
 1483 Routed  
 1483 Bridged

Encapsulation Mode: **LLC/SNAP**

Na sledećoj slici prikazano je biranje vrste konekcije: čekirajte **PPP over Ethernet (PPPoE)**, a kao enkapsulaciju: **LLC/SNAP**. Kliknite na dugme **Next**.

WAN IP Settings

Enter information provided to you by your ISP to configure the WAN IP settings.

Obtain an IP address automatically  
Use the following IP address:

WAN IP Address: 0.0.0.0

Enable NAPT

**Ostavite da ruter dobija IP adresu automatski.**  
Potrebno ostaviti **Enable NAPT** čekirano, kao na slici.  
Kliknite na dugme **Next**.

PPP usually requires that you have a user name and password to establish your connection.  
In the boxes below, enter the user name and password that your ISP has provided to you.

PPP Username: **username@sezampro**  
PPP Password: **\*\*\*\*\***

PPP Connection Type:  Continuous  
 Connect on Demand  
 Idle Time: 20  
 Manual  
 Idle Time: 20

Prateći sledeću sliku, potrebno je u polje **PPP Username** upisati Vaše korisničko ime sa dodatkom **@sezampro** (npr. Korisničko ime je borislav.pet, upišite [borislav.pet@sezampro](mailto:borislav.pet@sezampro)), a u polje **PPP Password** Vašu šifru.

Kliknite na **Next**.

# Uputstvo za podešavanje Planet ADE-4400A ruter

Status	Wizard	LAN	WAN	Advance
Wizard				
<b>LAN Interface Setup</b>				
This page is used to configure the LAN interface of your ADSL Router.				
LAN IP:	192.168.1.1			
LAN Netmask:	255.255.255.0			
<input type="checkbox"/> Enable Secondary IP				
<b>DHCP Server</b>				
Set and configure the Dynamic Host Protocol mode for your device.				
<input checked="" type="checkbox"/> Enable DHCP Server				
Start IP:	192.168.1.2			
End IP:	192.168.1.254			
Max Lease Time:	1	Day	0	Hour 0
Min (If all is -1 Max Lease Time is not limited)				
<a href="#">&lt; Back</a> <a href="#">Next &gt;</a>				
Status	Wizard	LAN	WAN	Advance
Wizard				
<b>WAN Setup - Summary</b>				
Make sure that the settings below match the settings provided by your ISP.				
<b>WAN Setup:</b>				
VPI/VCI	8 / 35			
Connect Type	PPPoE LLC/SNAP, connect forever			
NAPT	Enabled			
WAN IP	auto assigned			
Reserved Gateway	auto assigned			
DNS Server	auto assigned			
<b>LAN Configure:</b>				
LAN IP	192.168.1.1 / 255.255.255.0			
Secondary IP	0.0.0.0 / 0.0.0.0			
DHCP Server	Enabled			
DHCP IP Range	192.168.1.2 ~ 192.168.1.254			
DHCP Lease Time	1 day 0 hour 0 min			
Click "Finish" to save these settings. Then system will reboot. Click "Back" to make any modifications.				
<a href="#">&lt; Back</a> <a href="#">Finish</a>				

Adresa **LAN IP 192.168.1.1**, postavljena je fabrički, ona se ne menja. U slučaju da Vam je zbog podešavanja lokalne mreže potrebno da ruter ima drugu adresu, željenu upišite u polje LAN IP.

**DHCP Server** je automatski uključen.

Kliknite na dugme **Next**.

Poslednji korak za podešavanje ruter zahteva da kliknete na dugme **Finish**. Klikom na dugme Finish čuvaju se sva podešavanja. Nakon ovoga ruter će se restartovati, zatim sledi uspostavljanje veze sa Internetom.

Sačekajte da se ustali lampica **DATA** na ruteru. Nakon toga možete vršiti pretraživanje preko Vašeg internet pretraživača (Internet Explorer, Mozilla, Opera...).

Ukoliko budete imali ikakvih nejasnoća ili problema, molimo Vas da se obratite korisničkom servisu telefonskim putem na:  
**011 4100 100**.

Sve tekuće informacije možete naći i na našem sajtu : [www.oriontelekom.rs](http://www.oriontelekom.rs)